

Posh Patchwork Purse & Wristlet Pattern Updates

Pattern No. 2007077

It has come to our attention that the incorrect version of our Posh Patchwork Purse directions was inadvertently sent to the publisher. Please see the following clarifications/corrections:

Under the **Cutting Guide** section:

Posh Purse

From Contrasting Fabric, Cut:

- 2 ~ 8" W x 18" L rectangles {Bottom Band}
- 2 ~ 1-1/2" W x 18" L strips {Top Band}
- 1 ~ 4" W x 44" L strips {Bow Ties for Purse & Wristlet}

From Lining Fabric, Cut:

- 2 ~ 22" H x 20" W squares {Front & Back}

From Batting & Iron-On Interfacing, Cut:

- Delete the following: 1 ~ 6-1/4" H x 24" L strip {Sturdy Purse Base Cover}

From Ribbon, Cut:

- 3 size 11" long pieces {Posh Purse & Wristlet}

Posh Wristlet

From Contrasting Fabric, Cut:

- Note: 1 Bow Tie {Included in Posh Purse Cutting Guide}

From Ribbon, Cut:

- 1 size 3/8" W x 11" L grosgrain ribbon {Bow Tie}

For the Posh Patchwork Purse Assembly

Under the **Marking The Quilting Lines** section:

1. To prepare the Purse Front for quilting, use a see-thru ruler and a fabric marker to draw "X"s on each patchwork block until all patchwork blocks are marked.
2. Repeat Step 1 for Purse Back.

Under the **Making A Quilt Sandwich & Quilting** section:

4. To quilt the Purse Front, straight stitch directly on the drawn "X"s.
5. To complete the quilting, *stitch in the ditch* on the seam that connects the patchwork blocks to the Top Band. Repeat this Step for the Bottom Band.
6. Repeat Steps 1-5 for Purse Back.

Under the **Making The Bow Tie Belts** section:

1. Fold and sew a Bow Tie Belt strip in half lengthwise, *wrong sides together*.
5. Repeat Steps 1-4 for remaining Bow Tie Belt Strips.

Under the **Adding Bow Tie Belts To The Patchwork...See Updated Diagram C:**

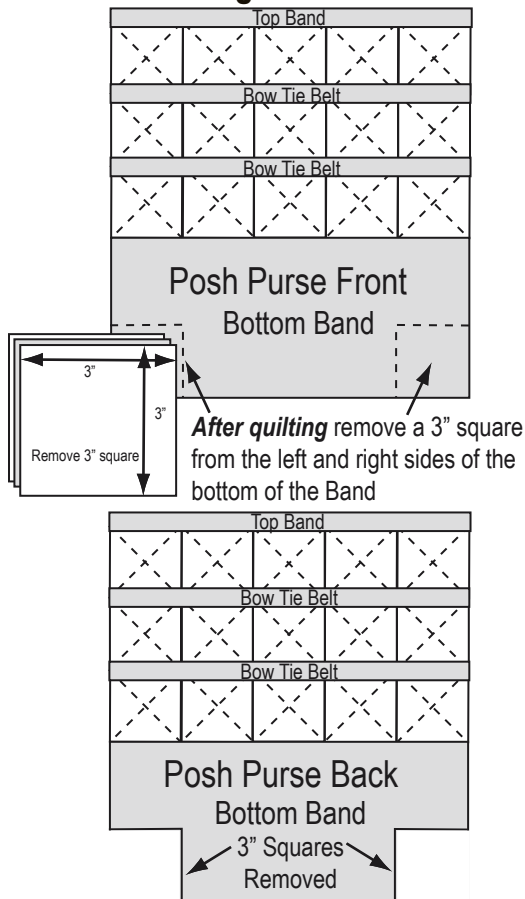


Diagram C: Adding Bow Tie Belts & Removing 3" Squares From Bottom Bands

Under the **Sewing Circle Patches & Ribbon Ties To Purse Front** section:

1. Center "posh" patches on the three center blocks of Purse Front, 1" down from the seam where the patchwork blocks meet the Bottom Band. **Note:** Circle Patches are spaced 1/2" apart. The left-side edge of the "p" circle patch should line up with the left side edge of the patchwork block. The right-side edge of the "h" circle patch should line up with the right-side edge of the patchwork block.
4. Center and securely stitch 3 Ribbon Ties vertically on the Bow Tie Belts and Top Band.

Under the **Zipper Installation & Adding Handles** section:

5. With *right* sides together, fold a strip for a Handle Loop in half lengthwise then pin and sew a seam. Press the seam {not the entire strip} opened with *the tip of the iron*.
6. Turn strip right side out then roll the seam to the back and center of the strip. Press. Repeat Steps 5-6 for remaining Handle Loops.
7. Thread strip for Handle Loop thru the hole on the left side of the Handle and bring the *cut ends together and pin*. To make the Loop, stitch a 1/4" seam close to the cut edges. Repeat this Step for the right side Handle Loop.

Under the **Lining Preparation & Pocket Layout...See Diagrams F & G** section:

1. To make a Lined Pocket, fold rectangle for Pocket, in half, matching edges.
2. Leaving a 5" opening in the bottom, pin then sew, the sides and bottom edges together. Clip corners.
3. Turn Pocket right side out, thru opening. Fold the opened seam up 1/4" inside the

- Pocket and press. Repeat Steps 1-3 for remaining Pocket.
4. Find the vertical centers of Lining Front and Lined Pocket.
 5. With a piece of Tear Easy under work, center and pin the Pocket to **right side** of Lining Front, 4" down from top edge.
 6. Repeat Steps 4-5 for Lining Back.
 7. Leaving the top edge opened, edge stitch Pockets to Lining Front & Back along the Pockets' side and bottom edges. Remove the Tear Easy.
 8. Apply Lite Steam-A-Seam to the **backside** of Lining Front & Back.
 9. Fold top edge of Lining Front 1/2" down on the **backside** and finger press. Apply Steam-A-Seam Tape. Repeat for Lining Back. **Note: Lift a 1/2" section of paper backing so finger pressing can be achieved. Only after 1/2" tape has been fused to folded edge should all paper backing be removed.**
 10. Carefully fuse the top folded edges of Linings close to the Zipper on Purse Front and Back, then edge stitch the folded edge of the Linings to the Zipper tapes.
 11. Remove any wrinkles from the Linings. Fuse then trim the Linings to size.

DO NOT Remove Paper Backing Before Reading **NOTE**

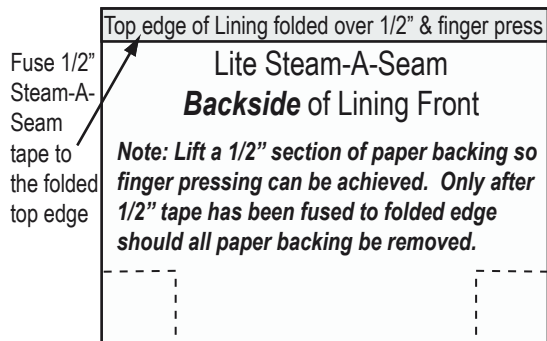
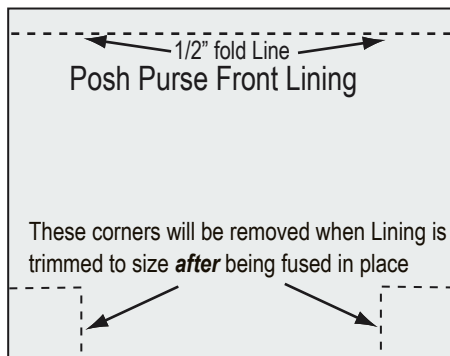


Diagram F: Posh Purse Lining Assembly



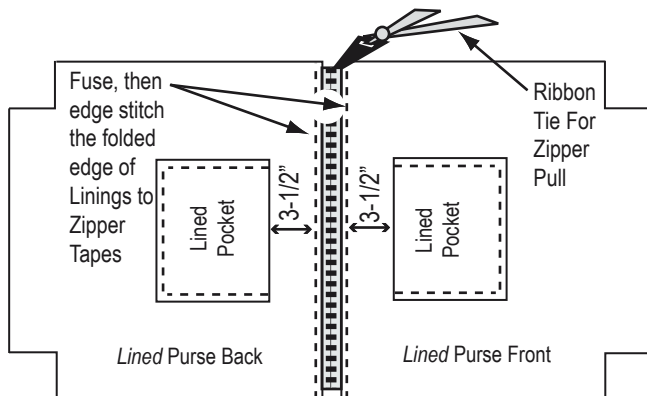


Diagram G: Lining Assembly


Under the **Forming A Boxed Corner...See updated Diagram H:**

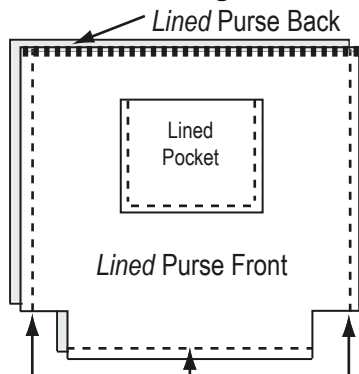

Open the zipper and with right sides together, pin then sew the bottom and side seams of Lined Purse Front and Back together. Finish seams with one or two rows of satin stitching.

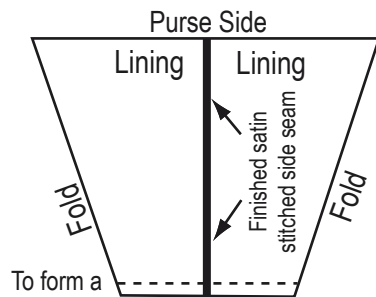

To form a boxed corner, bring side and bottom edges together, matching seam lines. Pin then sew a seam. Finish seam with a satin stitch.

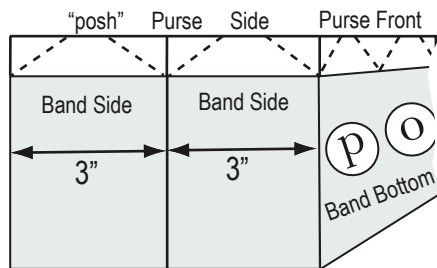

Finished formed box corner after "posh"
Purse has been turned right side out.

Diagram H: Forming A Boxed Corner

For the Posh Patchwork Wristlet Assembly

Under the **Piecing Blocks & Quilting** section:

- To make a 3-layer quilt sandwich, fuse the iron-on interfacing to the batting. Spray the **backside** of Wristlet Front with KK2000 and stack it on top of the batting. The Wristlet Front is now on top, the batting is in the center and the iron-on interfacing is on the bottom.
- With a see-thru ruler and a fabric marker, draw "X"s, *inside the 1/4" lines drawn in Step 4*, on each patchwork block until all blocks are covered. Quilt the Wristlet Front & Back by stitching directly on the "X"s.

Under the **Adding The Zipper** section:

- Using a wide zigzag stitch with a very short length, bar tack both ends of the Zipper Tapes.

Under the **Adding The Lining** section replace with:

1. Apply Lite Steam-A-Seam to the **backside** of Lining Front & Back.
2. For a finished edge, fold top edge of Lining Front 1/2" down on the **backside** and fingerpress. Repeat for Lining Back.
3. Apply 1/2" wide Steam-A-Seam Tape to the edge that was folded over in Step 2.
4. Lay Wristlet Front & Back wrong side up on a flat work surface. Finger press the top folded edges of Front & Back Linings close to the Zipper. Remove wrinkles from Linings, *carefully* fuse, then trim the Linings to size.
5. If desired, edge stitch the folded edge of the Linings to the Zipper tapes.

Under the **Strap & Wristlet Assembly** section replace Steps 6-19 with:

6. Repeat Steps 1-5 for the Strap Loop and D-Ring Loop.
You now have 3 tubes, one for the Strap, one for the Strap Loop, one for the D-Ring Loop.
7. To make the D-Ring Loop, slip the D-Ring Tube thru D-Ring, then baste the cut ends together.
8. Pin the D-Ring Loop to the left-side edge, 1/2" down from top of Wristlet Front.
9. **Open the Zipper** and bring the Wristlet Front and Wristlet Back right sides together.
10. Pin sides and bottom of Wristlet Front and Back together and sew a 1/4" seam. Clip bottom corners.
11. For a finished look, satin stitch the seams. If desired, satin stitch a second time.
12. Turn the Wristlet right side out thru the opened zipper.
13. Fold Strap in half and slip cut ends of strap thru D-Ring, turning the cut ends back 1" onto the strap.
14. Stitch and back stitch thru all layers close to the cut ends of the Strap.
15. To make the Strap Loop, determine and mark how tight the loop needs to be to cover the cut ends of the Strap. **Note:** *Strap Loop should fit snugly on Strap.*
16. Fold the Strap Loop right sides together and stitch the seam, according to previous mark. Trim excess seam allowance to size and turn Strap Loop right side out.
17. Insert the Strap thru the Strap Loop, sliding Loop down and over stitched ends of Strap. Tack Loop in place.
18. To make a Bow Tie, follow the directions in Diagram I for making and the Bow Tie and attaching to the Bow Tie Belt.